


# Owlet IoT RFID-Label - NEMA socket Installation Instruction

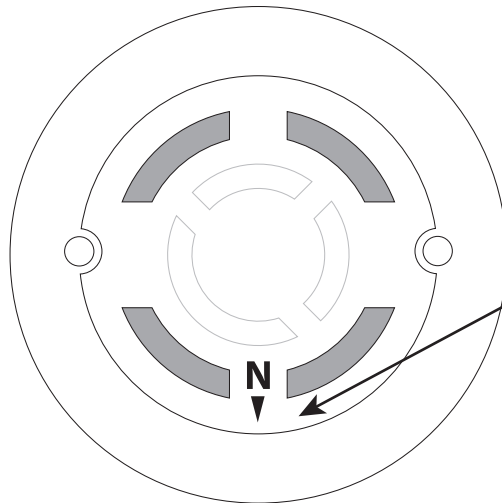


**NEMA socket Top View**  
with North Direction Marker

**Owlet RFID Label**  
with North Direction Marker



## Mounting Instruction

1. Align the label with the socket.  
Both North indication (socket/label should match).
2. Both should be right side up.

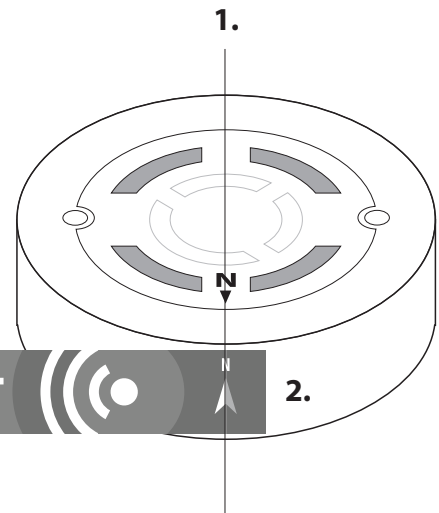

3. Stick the label to the side of the NEMA Socket parallel to the top edge of the socket
4. Ensure that the label is correctly stuck on its full surface.

